

---

# Harley-Davidson 18-20 Softail M8 Fat Bob FXFB Lower Fork Covers



## Mounting instructions

---

1. Check all clearances before, during and after installation.
2. Raise the front of the motorcycle enough to take the front wheel off. Make sure it won't fall during all operations. Take the front wheel off following H-D factory service manuals.
3. Take both front fork tubes assemblies off following H-D factory service manuals.
4. Assemble the fork tubes back putting it through the covers and unscrew the brake supports (see Fig.1 below).



Fig.1



Fig.2

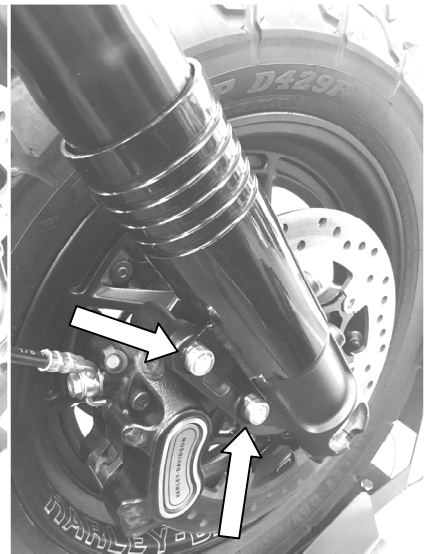


Fig.3

5. Put 5 mm spacers as shown on the figure 2.
6. Fix the brake supports and the covers in position using included M10x45 bolts and the thread locking glue (not included) as shown on the figure 3.
7. After putting front fork tubes assemblies back on the motorcycle check all bolting is screwed according to the H-D factory service manuals!
8. Put the front wheel back on the motorcycle following H-D factory service manuals. Now the installation is complete.
9. After the installations test drive the bike to be sure everything is working perfectly.

### NOTE:

- Installation of this kit requires detailed knowledge of the motorcycle model and mechanics. It is assumed that the installer has access to the proper tools and a working knowledge of them and factory service manuals.

**Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.**