

## ASSEMBLY INSTRUCTIONS

Harley-Davidson 2018-2021 M8 Softail Side Covers "Avenger" For Shock Absorber With/Without Preload Adjustment Knob

> SC-AVG SC-AVG-NK



These parts are handmade of fiberglass come with a black gelcoat finish. **This coating is not final use coating and will need to be top -coated (such as paint) for final use.** Minor surface imperfections and scuffs are normal and may happen during taking parts out of the mold and shipping. This is allowable as the coating will need to be scuffed for final top-coat preparation.

For questions pertaining to the installation of this product, please contact our Killer Custom technical department at info@killercustom.com. This product is manufactured in Europe by Killer Custom

**NOTE:** Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.

- 1. Check all clearances before, during and after installation.
- 2. Remove the original side covers from the motorcycle. Remove the rubber grommets (3x) from the original side covers and attach to the custom ones as shown on Fig. 1 below.

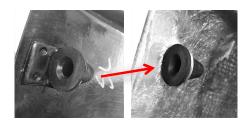


Fig. 1

3. Before the putting the covers on the motorcycle on the right side of the motorcycle you have to put the spacer on the lower holder as shown on the Fig. 2



Fig. 2

- 4. Now put the side covers on the motorcycle the same way as the original ones. Use the OEM bolting. The installation is finished.
- 5. After the installations test drive the bike to be sure everything is working perfectly.

## NOTE:

- Installation of this kit requires detailed knowledge of the motorcycle model and mechanics. It is
  assumed that the installer has access to the proper tools and a working knowledge of them and
  factory service manuals.
- Before the painting the parts first you have to put those on the motorcycle and make sure that everything is adjusted and fits perfectly. Killer Custom will not be responsible for any fitment issues after paint.

WWW.KILLERCUSTOM.COM