

---


## Harley-Davidson "Bobbstr" Series Softail Radiator Cover 18-23

### Mounting instructions

---



1. Check all clearances before, during and after installation.
2. Attach two brackets to the Radiator Cover as shown on the picture below (use the included M5 nuts and washers).

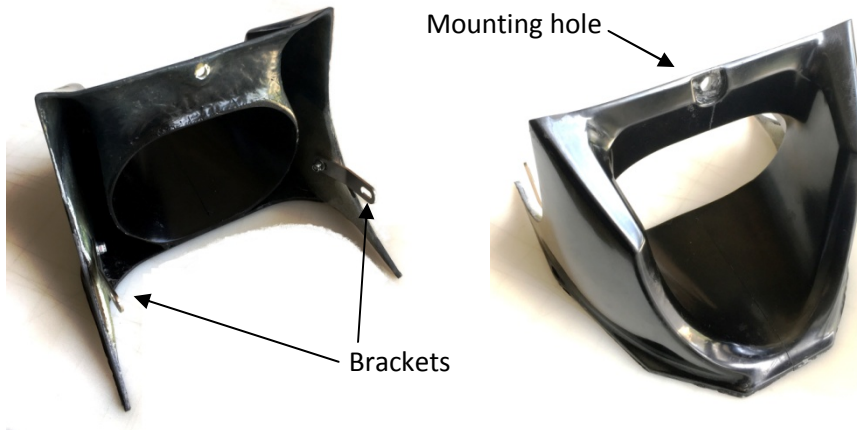

3. Put the Radiator Cover on the motorcycle. Upper mounting hole is used for fixing the spoiler at the point there OEM radiator cover bolt is. Use there the longer bolt which is included. In the lower front frame bends there are two extra holes originally covered with clips. Remove the clips and use these holes to fix the bottom of the cover with the M5 screws nuts and washers. You may need to adjust the lower brackets to align the holes. The installation is finished.
4. After the installations test drive the bike to be sure everything is working perfectly.

#### NOTE:

- Installation of this kit requires detailed knowledge of the motorcycle model and mechanics. It is assumed that the installer has access to the proper tools and a working knowledge of them and factory service manuals.
- Before the painting the parts first you have to put those on the motorcycle and make sure that everything is adjusted and fits perfectly.

**Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.**