


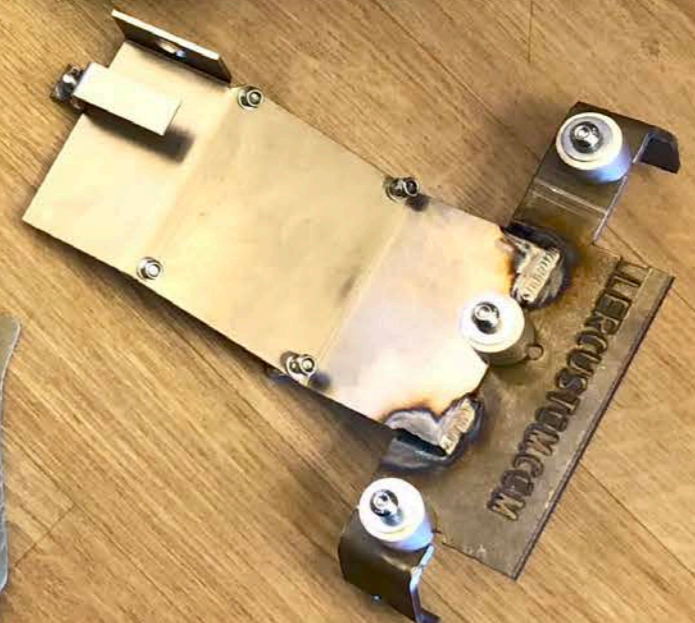
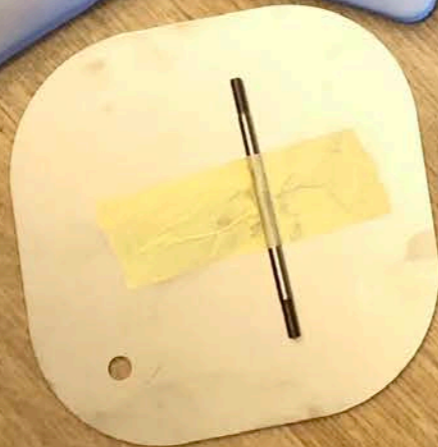


Monocoque installation manual

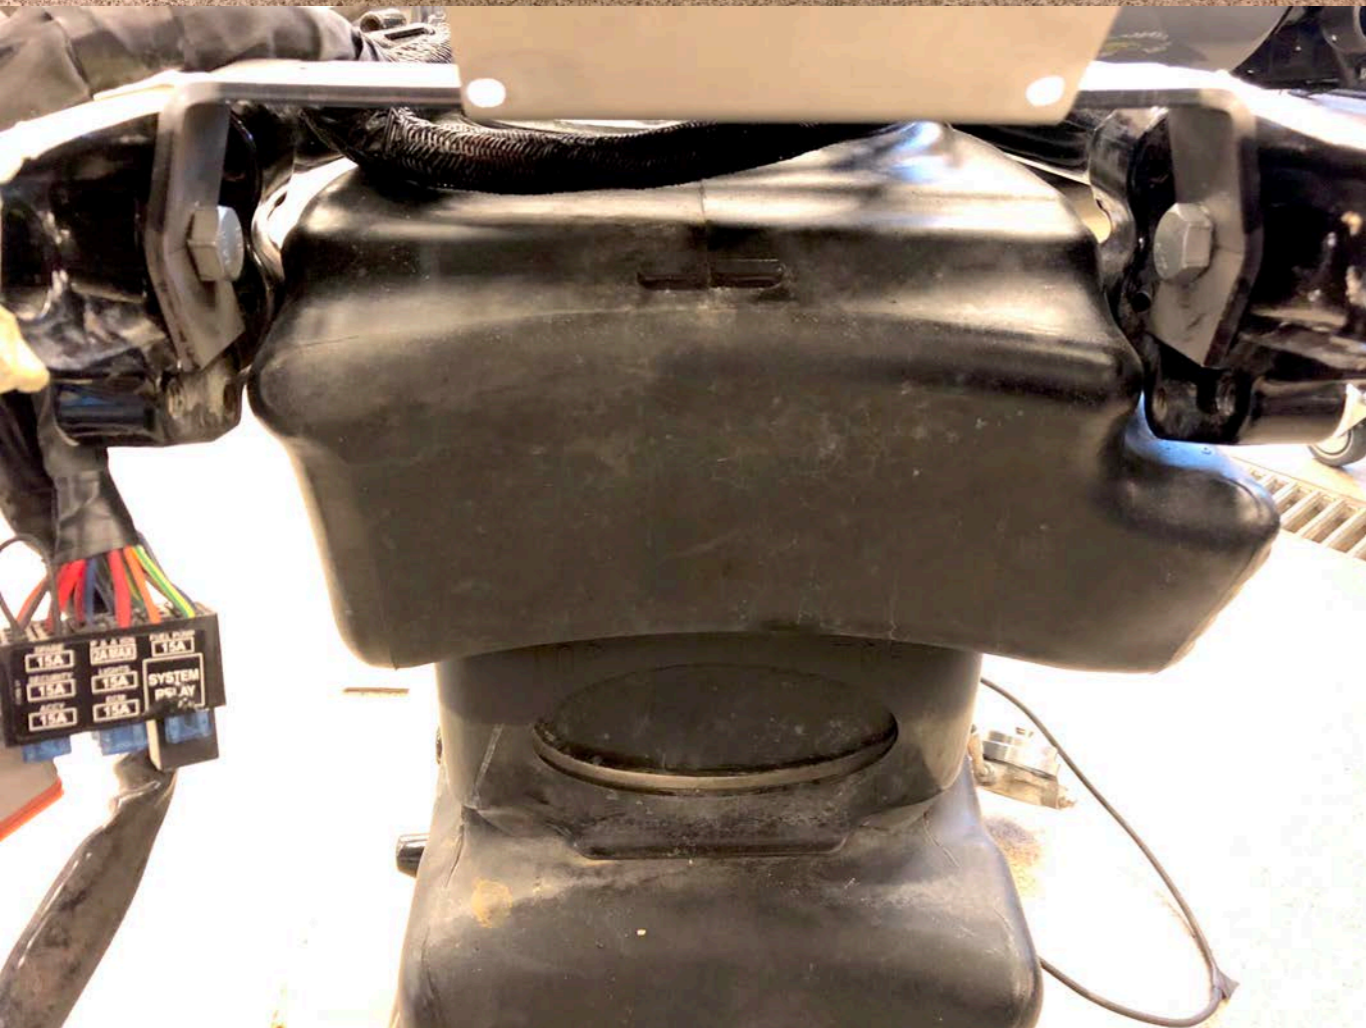

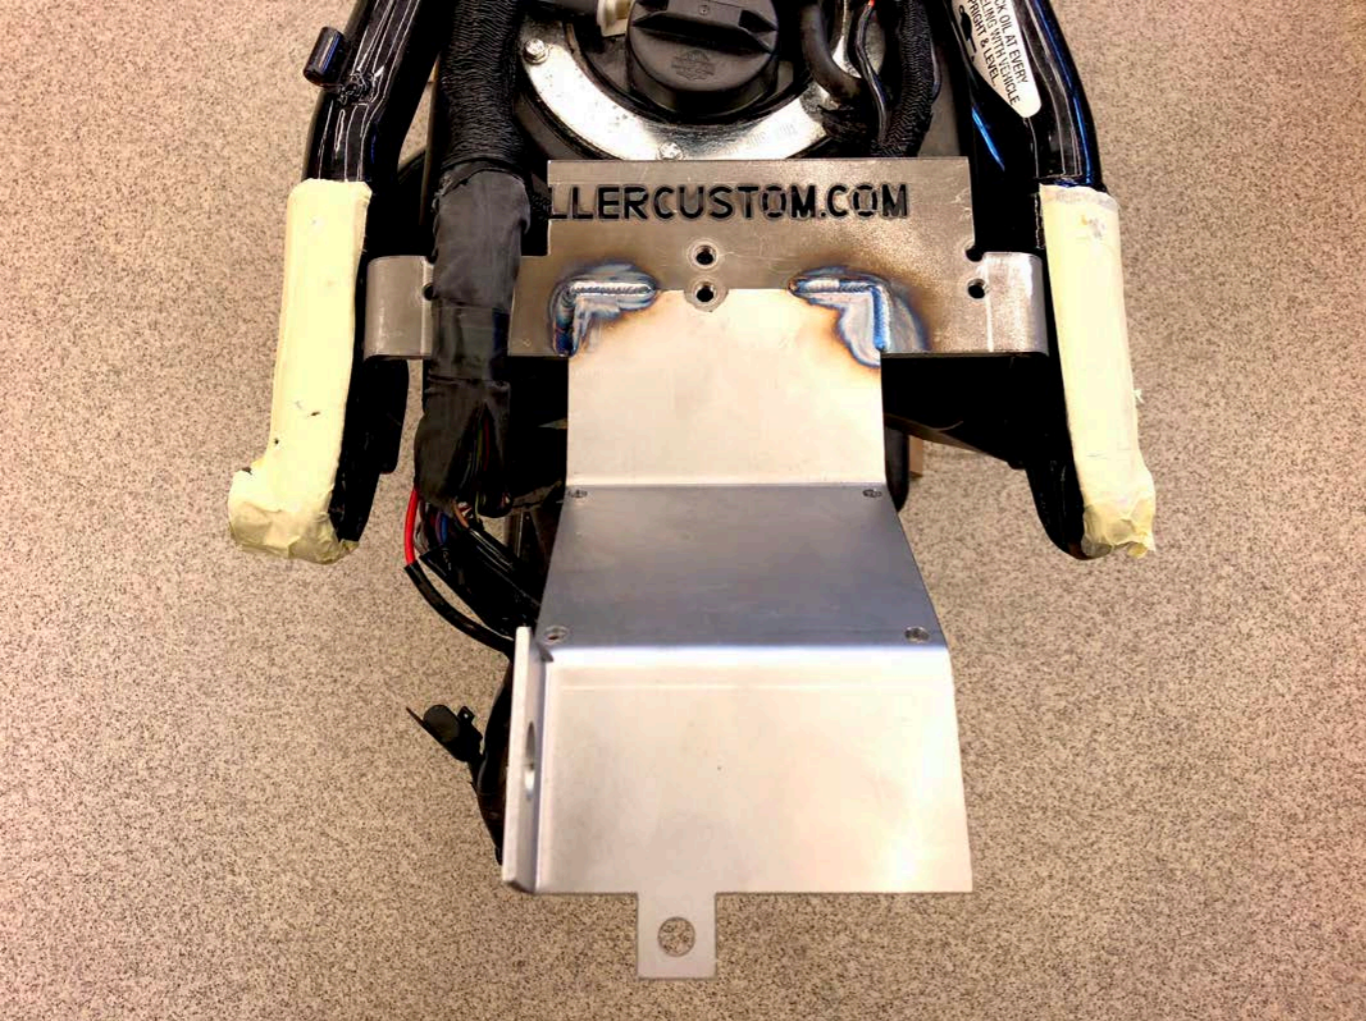

**Place the
bracket
in the
place and
screw
original
bolts**

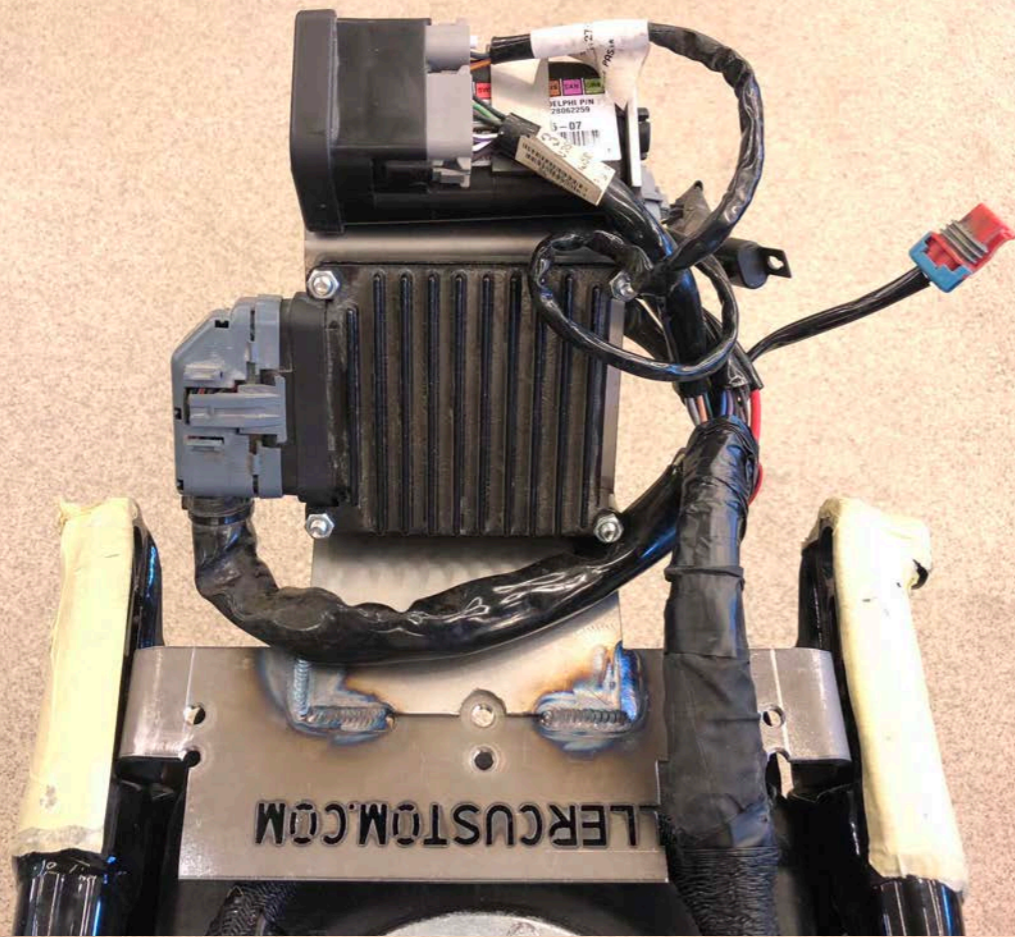


Fasten ECM
with four screws
and BCM using
bracket



Place inner plate
and three bushings
on top.

Wiring harness
have be placed as
shown

Put the tail lamp
and dashboard
in the place and
screw with the
brackets

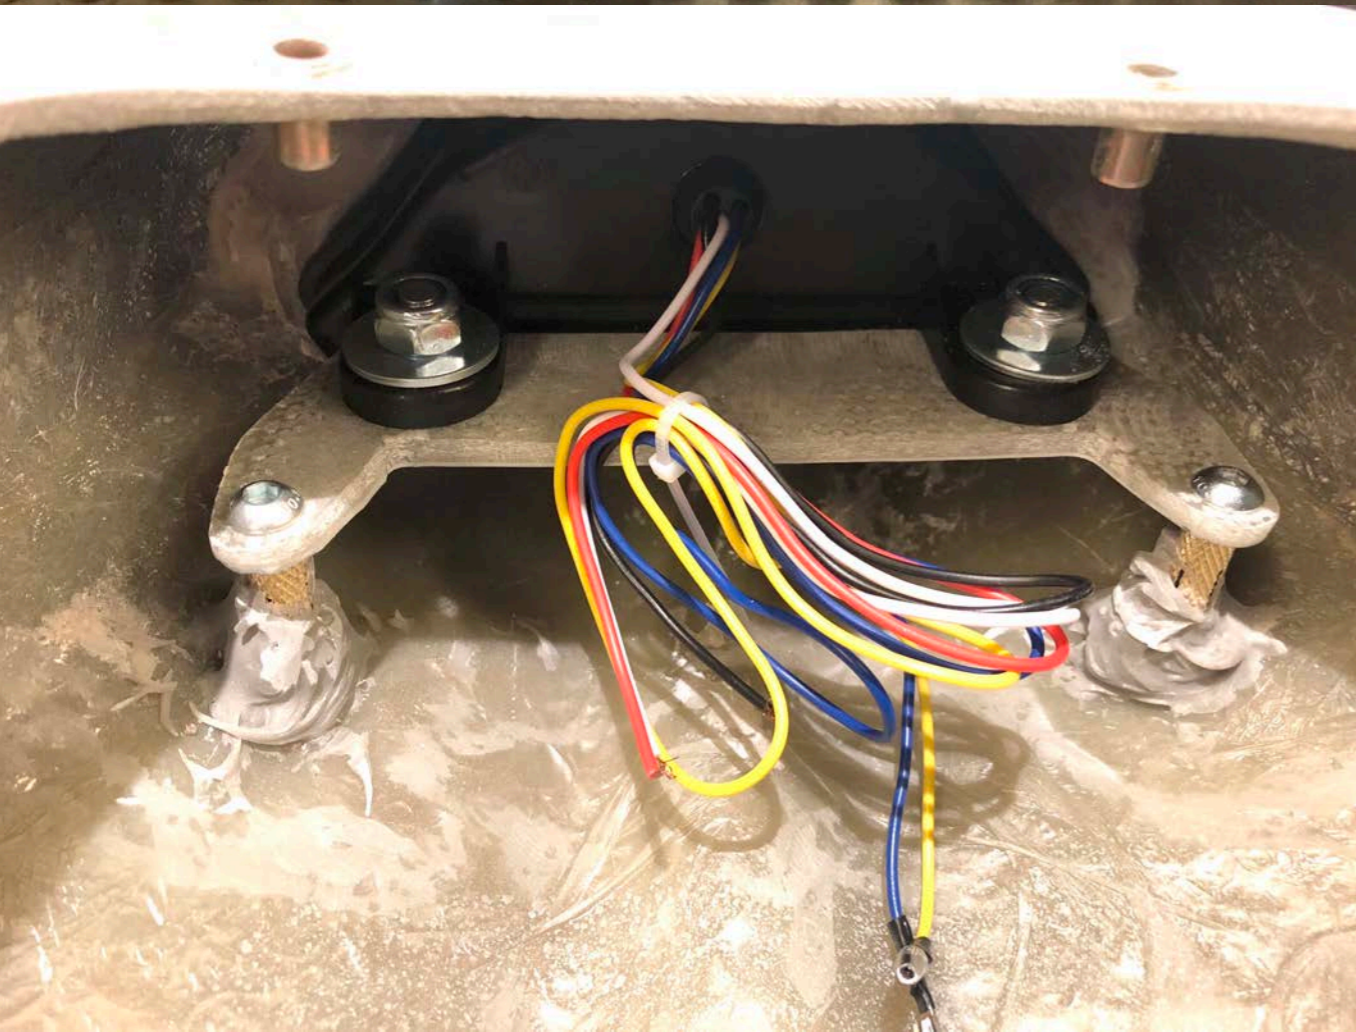




Place the wiring harness inside and fasten lower cover using four screws



**Put the monocoque
in the place and
fasten using three
screws**



**Glue the seat
pad using
"Velcro"
material**

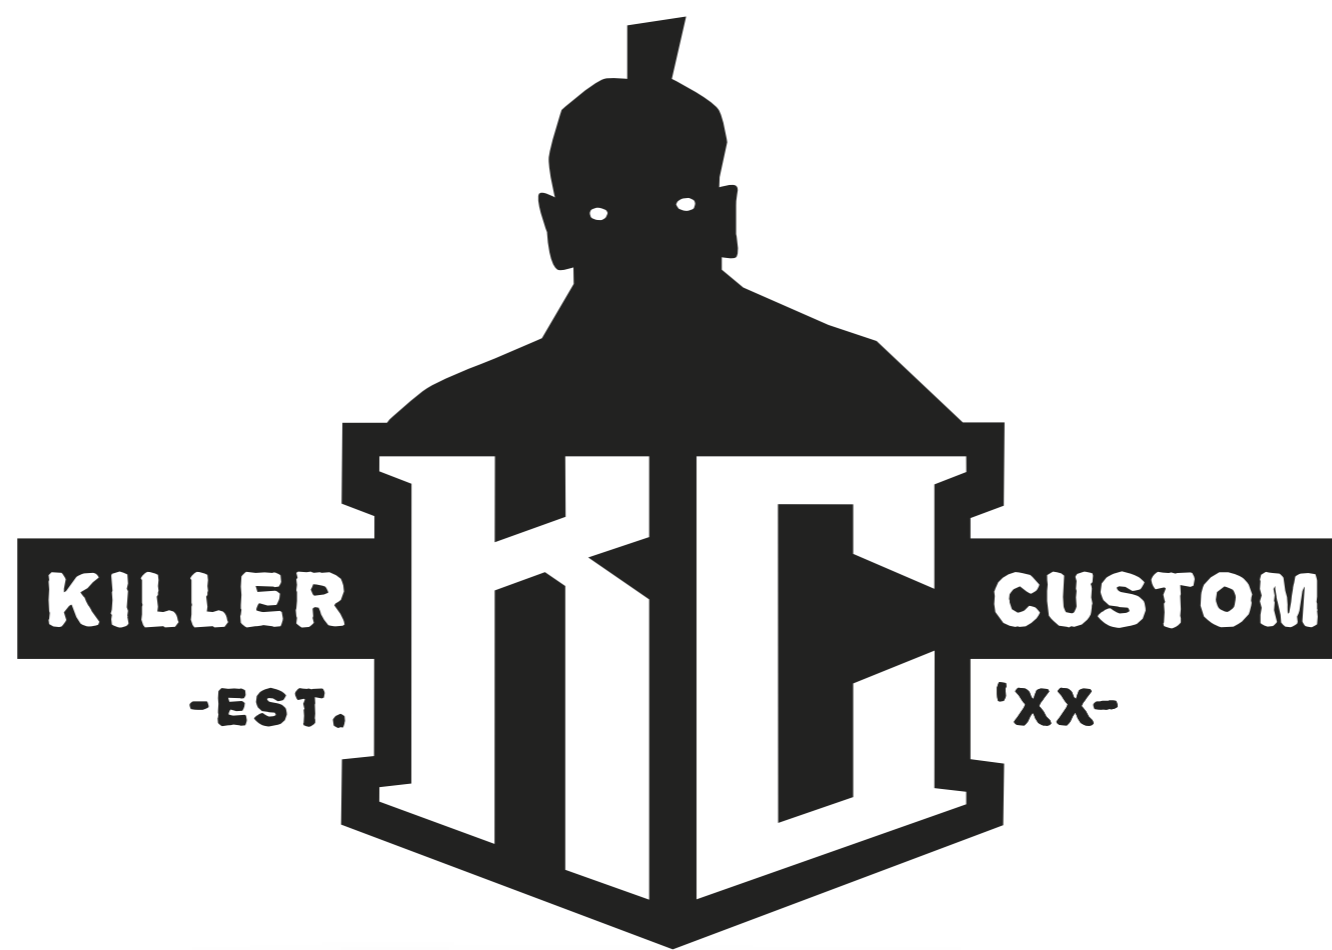

**Congratulations!
You have finished!**

**We highly recommend to check
everything on motorcycle before painting!**

Note. Never drive backwards!