

2018-2023 Harley-Davidson Softail M8 Front / Rear Axle / Swingarm Cover Set Mounting instructions



1. This instruction is for the full Cover set, however, if you bought only front, rear or swingarm axle covers, just follow appropriate parts of instruction.
2. Check all clearances before, during and after installation.
3. Check the positions of the Covers first.
4. There are two caps to cover the rear axle ends. The bigger one goes to the right side of the bike and the smaller one goes to the left. These parts are fixed using fixing screws. Use the thread locker glue (not included).
5. To cover the swingarm axle ends there are one cap in the left side fixed using fixing screw. The flat cover on the right side is fixed with 3M™ Press-In-Place Emblem Adhesive.
6. For the front axle use two flat covers fixed with 3M™ Press-In-Place Emblem Adhesive.
7. 3M™ Press-In-Place Emblem Adhesive using instructions:
 - Clean and degrease the surfaces you want to apply the covers.
 - Remove the front liner from a sheet of 3M™ Press-In-Place Emblem Adhesive.
 - Firmly press the backing side of the Cover into the sheet of 3M™ Press-In-Place Emblem Adhesive.
 - Peel sheet away and be sure that adhesive has transferred to the backing of the Cover (will see adhesive removed on 3M™ Press-In-Place Emblem Adhesive).
 - Firmly press the back side of the Cover onto the desired location. Press lightly at first to insure correct position, then press firmly to secure the bond. This is pressure-sensitive adhesive; press as firmly as possible without damaging the Covers or vehicle for the strongest bond.

Congrats! The installation is complete.
Now you are the Customizer ☺




Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.

2018-2023 Harley-Davidson Softail M8 Front / Rear Axle / Swingarm Cover Set Mounting instructions



1. This instruction is for the full Cover set, however, if you bought only front, rear or swingarm axle covers, just follow appropriate parts of instruction.
2. Check all clearances before, during and after installation.
3. Check the positions of the Covers first.
4. There are two caps to cover the rear axle ends. The bigger one goes to the right side of the bike and the smaller one goes to the left. These parts are fixed using fixing screws. Use the thread locker glue (not included).
5. To cover the swingarm axle ends there are one cap in the left side fixed using fixing screw. The flat cover on the right side is fixed with 3M™ Press-In-Place Emblem Adhesive.
6. For the front axle use two flat covers fixed with 3M™ Press-In-Place Emblem Adhesive.
7. 3M™ Press-In-Place Emblem Adhesive using instructions:
 - Clean and degrease the surfaces you want to apply the covers.
 - Remove the front liner from a sheet of 3M™ Press-In-Place Emblem Adhesive.
 - Firmly press the backing side of the Cover into the sheet of 3M™ Press-In-Place Emblem Adhesive.
 - Peel sheet away and be sure that adhesive has transferred to the backing of the Cover (will see adhesive removed on 3M™ Press-In-Place Emblem Adhesive).
 - Firmly press the back side of the Cover onto the desired location. Press lightly at first to insure correct position, then press firmly to secure the bond. This is pressure-sensitive adhesive; press as firmly as possible without damaging the Covers or vehicle for the strongest bond.

Congrats! The installation is complete.
Now you are the Customizer ☺

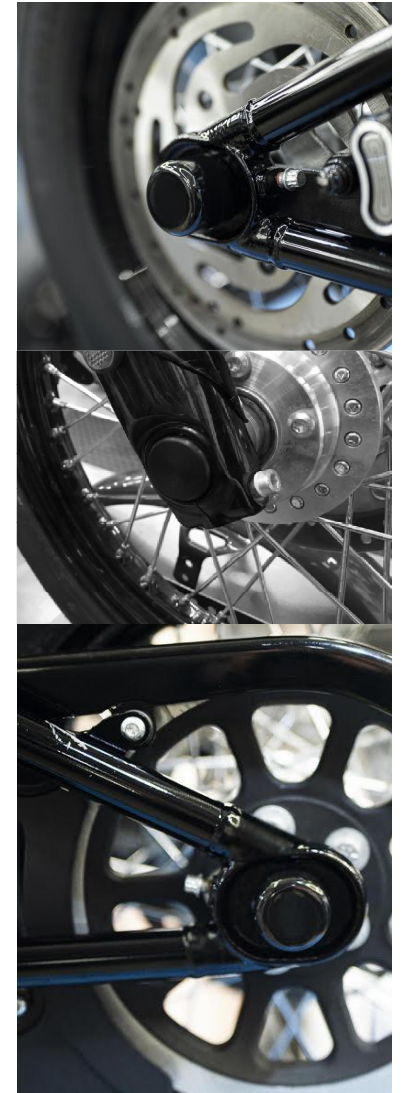

Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.