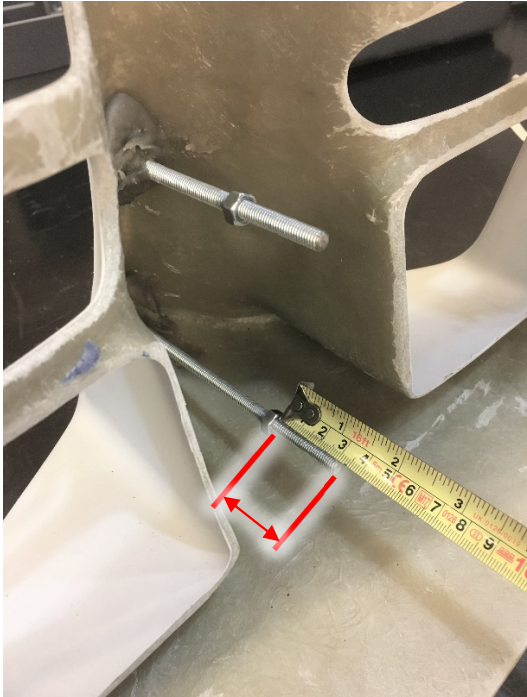

Harley-Davidson V-Rod Radiator Cover 06-17 "Indy" Mounting instructions



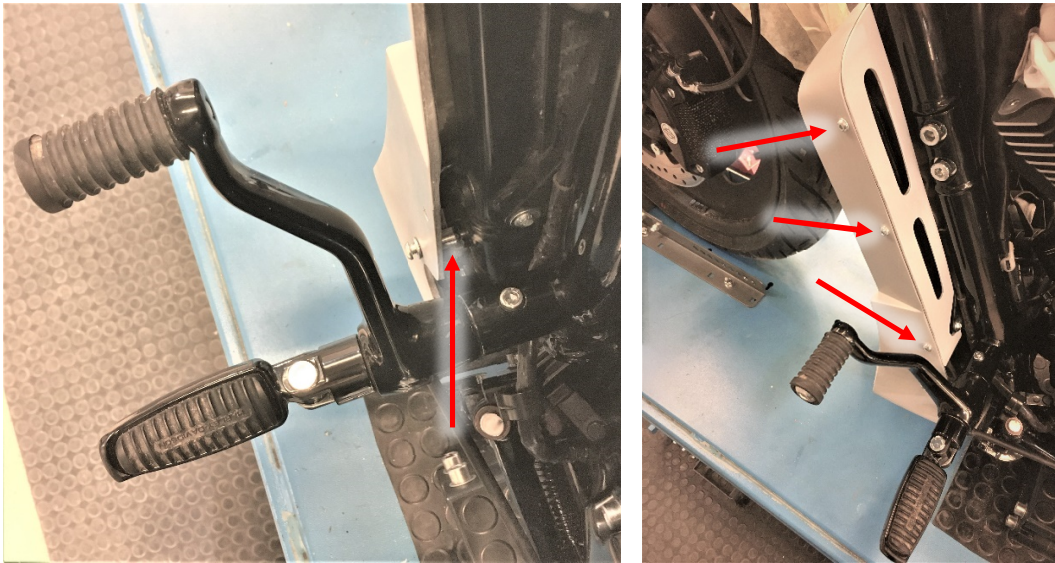
1. Check all clearances before, during and after installation.
2. Remove the OEM radiator cover and voltage regulator from the motorcycle. Disconnect the voltage regulator from the wiring.
3. Put the nuts on the studs ~30 mm (~1 1/4") from the edge as shown on the pictures below. Attach the voltage regulator to the spoiler.



4. Carefully put the wiring (except the voltage regulator plugs) in the space between the radiator and the frame. Connect the voltage regulator wiring plugs and put the chin spoiler on the motorcycle. Use OEM nuts to fix the top of the spoiler. See pictures below.



5. Use the included bolts and cylindrical spacers to fix the bottom of the spoiler on both sides. The last step is putting the side covers and fixing using three included bolts and spacers on each side. Refer to the pictures.



6. After the installations test drive the bike to be sure everything is working perfectly.

NOTE:

- Installation of this kit requires detailed knowledge of the motorcycle model and mechanics. It is assumed that the installer has access to the proper tools and a working knowledge of them and factory service manuals.

Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.