

ASSEMBLY INSTRUCTIONS

HARLEY-DAVIDSON "AGGRESSOR" SERIES SOFTAIL M8 RADIATOR COVER 2018-2022

STCHIN-18-19






These parts are handmade of fiberglass come with a black gelcoat finish. This coating is not final use coating and will need to be top-coated (such as paint) for final use. Minor surface imperfections and scuffs are normal and may happen during taking parts out of the mold and shipping. This is allowable as the coating will need to be scuffed for final top-coat preparation.

For questions pertaining to the installation of this product, please contact our Killer Custom technical department at info@killercustom.com. This product is manufactured in Europe by Killer Custom

NOTE: Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.

- 1. Check all clearances before, during and after installation. Warning: check the fitment of all parts before painting!
- 2. Attach the upper and two lower brackets to the Radiator Cover as shown on the picture below (use the included M5 nuts and washers).

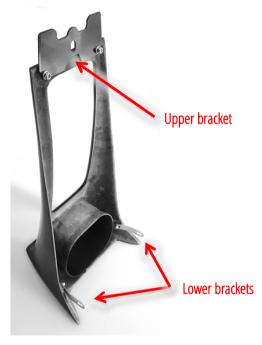

- 3. Put the included mesh on the Radiator Cover. Use hot glue or windshield adhesive to fix it.
- 4. Put the Radiator Cover on the motorcycle. There are two holes on the upper front frame crossmember. Use the lower hole to fix the upper part of the cover with M8 screw, M8 nut and washers. In the lower front frame bends, there are two extra holes originally covered with clips. Remove the clips and use these holes to fix the bottom of the cover with the M5 screws nuts and washers. You may need to adjust the lower brackets to align the holes. The installation is finished.
- 5. After the installations test drive the bike to be sure everything is working perfectly.

NOTE:

- Installation of this kit requires detailed knowledge of the motorcycle model and mechanics. It is
 assumed that the installer has access to the proper tools and a working knowledge of them and
 factory service manuals.
- Before the painting the parts first you have to put those on the motorcycle and make sure that
 everything is adjusted and fits perfectly. Killer Custom will not be responsible for any fitment
 issues after paint.

WWW.KILLERCUSTOM.COM